

SIMPLE STEPS TO USE POOL ALARM

The system is designed to activate the alarm if something/someone falls in the pool.

The **GREEN** light means the alarm is **ON** and activated. The **RED** light means it is **OFF**.

TO GO FOR A SWIM

Deactivate the alarm by simply placing the magnet provided on the **SWIMMER** symbol. The alarm makes 5 bleeps and the **RED** light is on. You can now go in the water without starting the alarm.

AUTOMATIC RESET

If there is no movement in the pool, the alarm will reset itself on its own after around 10minutes, after that, the **GREEN** light should be on again.

MANUAL RESET

To reset the alarm manually, simply place the magnet on the **SWIMMER** symbol.

Two situations :

1. If the water is not calm enough, there will be a short deep sound and the **RED** light will flash, the system cannot reset itself, the pool is not protected, you have to wait.
2. a long high pitch sound is heard and the **GREEN** light turns itself on, the system is set again.

TOO MUCH WIND

Under some bad weather circumstances, it may be that the alarm is unstable, you will see its **RED** light flashing fast 3 times every 4 seconds, and a deep sound is heard every 15 seconds. The pool is not protected ! **BE AWARE !**

To turn off the alarm completely:

- Place 1 magnet on the **SWIMMER** symbol long enough until a very loud bleep and a rapid flashing of the **RED** light,
- Only then place the second magnet on the **RED** stop switch. The **RED** light will stay on and 15 short bleeps will be heard; your alarm is off.
- To turn back on, place magnet on **SWIMMER** symbol, wait until you hear 5 short high pitch bleeps and the **RED** light flashes, then wait for the alarm to reset itself or use manual reset steps described above.

